

**X-Rider**

# SATURN

**1/8 RC Motorcycle 遥控摩托车**  
**Manual 说明书**



[www.cx3rider.com](http://www.cx3rider.com)

骑士模型有限公司

X-RIDER MODEL COMPANY LIMITED



Thank you for purchasing X-RIDER Saturn. We believe that this new motorcycle will bring you infinite happiness. Before use, please read the manual carefully and safe keeping. Accidents are caused by illegal use, the company doesn't undertake any responsibility.

The Saturn is a high performance RC motorcycle. This product has like the real motorcycle setting, innovative design of the front wheel inverted shock absorbers and rear wheel pendulum arm suspension for the most reliable grip performance. Front alloy calipers ensures excellent braking performance. Built-in Gyro in the rear wheel, providing an easy platform to control and a more stable driving experience. Oil-filled steering dampers provides better and faster turning action. High grade metal and carbon fiber chassis, uniquely designed for 1/8th application. In order to exert the performance, for maximum enjoyment of this product, please read this manual carefully.

We will have strict testing and debugging before exiting the facility. We promise to customers. Products issue without any material and process problems. We will free for customers to repair within 90 days from the date of purchase. Customer service e-mail: service@cx3rider.com.

The warranty doesn't cover crash damage, modification, failure to maintenance, or the damaged caused by improper use. The warranty doesn't cover any result which caused by the final user's assembly or the material used for final user's assembly. Please download the other language versions manual and parts list from our website : <http://www.cx3rider.com>

感谢您购买 X-RIDER 土星摩托车，相信这一全新产品会给您带来无限欢乐。在使用产品前请您认真阅读产品使用指南，并妥善保管。因违反本手册中的安全注意事项及使用事项而导致的事故，本公司不承担任何责任。

土星是一款高性能遥控（R/C）摩托车模型。本产品拥有像真摩托车的设置，前轮倒立式避震和后轮单摆臂悬架的结构，实现可靠的抓地性能。前轮采用合金刹车，有效减低及刹停速。后轮内置陀螺仪，操控更容易和稳定。转向采用油压避震器，实现更好的转向。车身采用铝合金和碳纤维板，高档精致。为了更加充分的发挥这些性能，更好的体会其中乐趣，请在使用前仔细阅读说明书。

每辆摩托车出厂前都经过严格的测试与调试，我司保证，客户购买的产品打开包装后，无任何材料及工艺方面的问题。购买之日起90天内，我司将免费为客户维修。售后联系邮箱为service@cx3rider.com.

由于碰撞，翻车，用户自行更改配置，属于保养或者任何不当使用引起的损坏，将不在保修范围内。

由终端用户自行安装或自行安装所适用的材料引起的任何问题，亦不属于保修范围。

请登录X-Rider 网站下载其它语言版本的说明书及配件图：<http://www.cx3rider.com>

## 【Safety Precautions / 安全说明】

### 1. The specification of the logo 关于本说明书中使用标识

⚠ Caution: this symbol indicates where caution is essential to avoid injury to yourself or others.

② Note: this symbol indicates where give you a tip in use.

⚠ 注意：此标识提醒您注意避免伤害到自己及其他人。

② 提示：此标识是作为一个小提示供使用过程中一个参考。

### 2. The use of power 关于产品使用的电源

- The product use lithium Polymer battery 7.4V/35C/1850mAh
- Never disassemble the polarity required for installation. This may lead to damage and leakage.
- While charging, the Lithium Polymer battery and charger become hot. Do not charge on top of inflammable materials as this may cause fire.
- Do not operate the DC Peak Charger in direct sunlight or in high temperatures. Continually monitor the charger while charging is in progress.
- Short circuit may cause fire or accident so never disassemble or modify the Lithium Polymer battery .
- Lithium Polymer batteries contain toxic metals. An exploding battery is extremely dangerous so never put in fire.
- 本产品使用 7.4V/35C/1850mAh 毫安的锂电池。
- 请注意电池的正负极, 以确保安装正确, 错误的安装可能导致电池的损害及毒性物质泄露。
- 充电时, 锂电池及充电器会变热, 请不要在易燃材料上充电, 否则可能会导致火灾事故等情况发生。
- 请不要在直射阳光下等高温场所进行充电。充电时, 请不要长时间在充电附近。
- 短路可能会导致火灾, 请不要分解或更改锂电池。
- 锂电池中含有害重金属, 如破裂会非常危险, 请勿投入火中。

### 3. The safety of Children 关于儿童安全

- This model is not a toy. It is designed for users over 15 yeas of age.
- A s the product includes small and sharp parts, assemble and store this product only in places out of the reach of children.
- 此模型不是玩具。它为15岁及以上年龄设计。
- 此产品含有微小、尖锐部分, 请在组装, 使用及保存时避免婴幼儿触及。

### 4. The safety of User 关于使用者的人身安全

- It's highly recommended that first-time enthusiasts seek the advice of an experienced modeler before operating this vehicle.
- Cutters, wire cutter and screwdrivers need careful handling.

- Do not touch moving gears. They can cause injury.
- During and after operation, the motor and batteries will be hot. Do not touch them until they have had time to cool down.
- 强烈推荐初次接触者在有经验者的指导下组装及操作此产品。
- 请小心使用剪刀，线钳及螺丝刀等。
- 请勿触及转动的齿轮。它们会导致受伤。
- 在模型运行中及运行后一段时间，电机和电池处于极热状态。在其冷却前请勿触及。



#### 5. The range of use 关于产品的使用范围

- Do not run your car in sandy, dusty, wet conditions, on long wool carpet. Such surfaces can damage its operating parts.
- Do not operate the model on public roads, in crowded places or near infants. It may cause accidents or injury.
- This product emits electrical waves so do not operate: Inside an aircraft. Near automatic devices such as automatic doors and fire alarms. Inside hospitals or medical equipment. Operating may cause accidents.
- 模型禁止在泥沙地，尘土飞扬地，潮湿地，长毛地毯上行驶。在此类表面行驶可导致零部件损坏。
- 请勿在公路，拥挤地区及儿童附近操纵模型，可能会导致危险情况发生。
- 请勿在飞机、自动门或报警器等自动控制机器附近、医院和电子医疗器械周边等场所内使用，本产品发出的电波信号可能会对上述机器产生影响，造成失误。

#### 6. The maintenance of product 关于产品的维护与保养

- Do not store this model in a high-temperature/humidity area or in direct sunlight.
- Do not use water, alcohol, or thinner to clean your car's body.
- Simply wipe it down with a clean, soft cloth.
- 请避免将模型放置在高温、潮湿及阳光直射处。
- 请勿使用水、溶剂等清洗车壳。
- 请用清洁软布擦拭。

## 【Illustration of Main Parts / 产品主要部件图示】

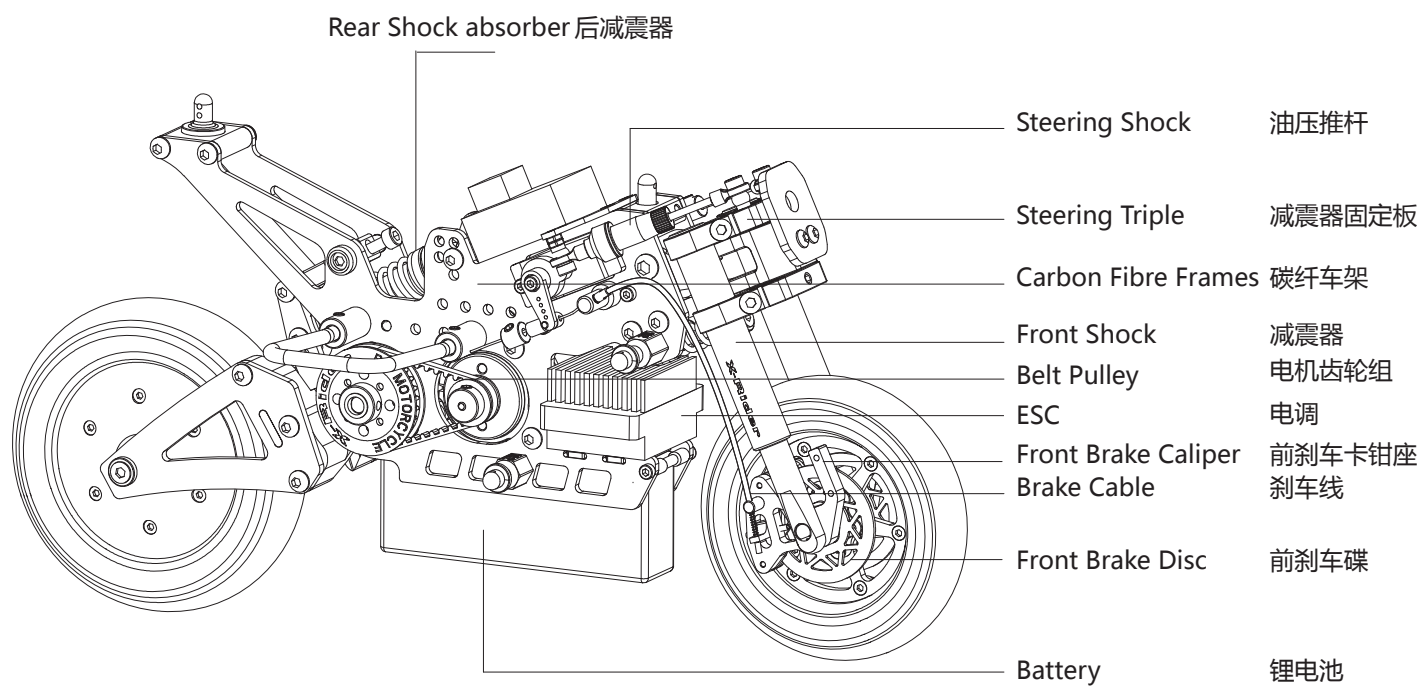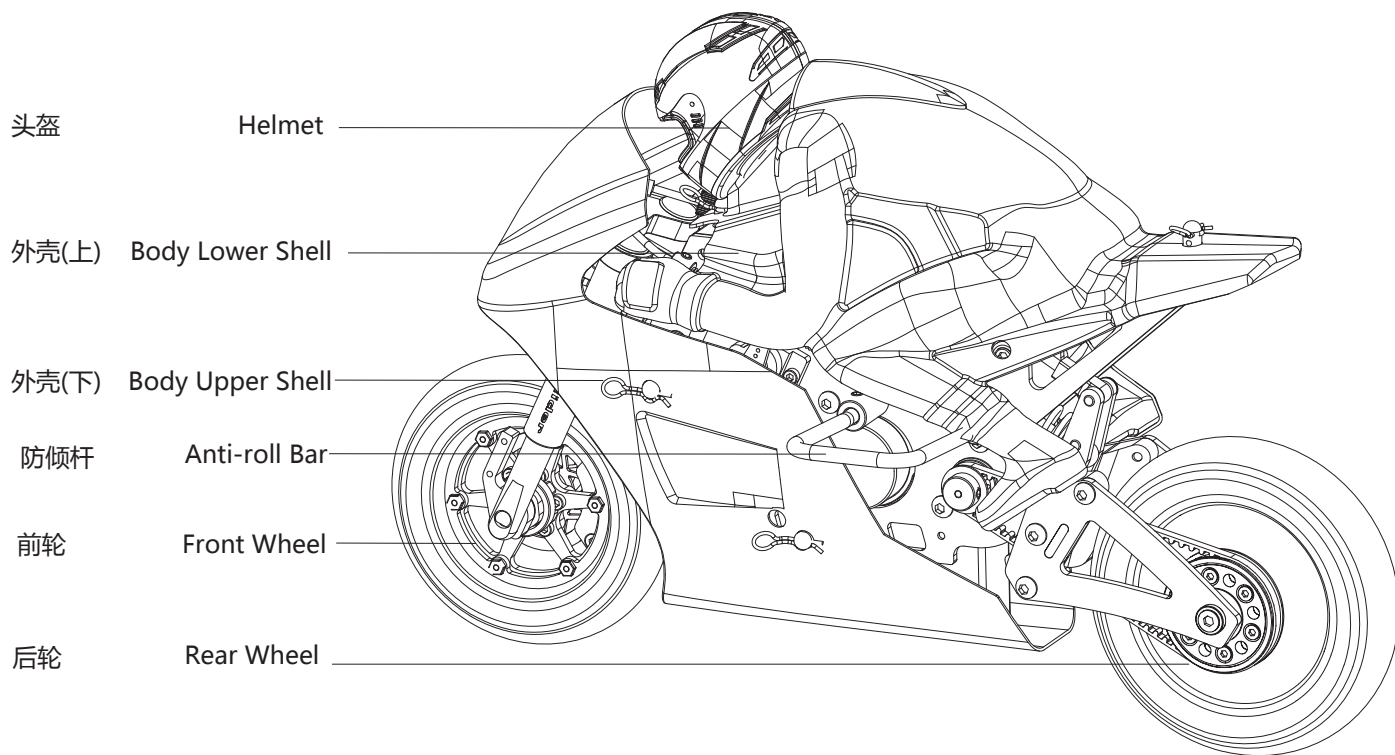



## 【Ready To Run Preparation / 跑前准备工作】

Step1. Check all the parts in the box. 检查包装里的部件

When you open the box, you will find follow parts 打开包装盒，有以下部件：

| Motorcycle | Helmet | Sticker | Anti-roll Bars | USB Flash Disk |
|------------|--------|---------|----------------|----------------|
| 车架         | 头盔     | 贴纸      | 防倾杆组           | U盘             |
| 1set       | 1set   | 1pc     | 1set           | 1pc            |

Equipment Sold Separately: 以下配件客户需要单独购买：

Remote Control ( Recommend using 2.4GHz 3 channel ) 遥控器（ 建议使用三通道 ），

Silicone Oil, Screw Glue, Tire Rubber 润滑油，螺丝胶，轮胎胶。

Tool Required 以下工具在操作中有可能会使用到：

Hex screwdriver,Cross Wrench,Cross Screwdrive,Tweezers,Hex Wrench.

内六角螺丝刀，车用小十字扳手，十字螺丝刀，镊子，内六角扳手

Step 2. Remove the R-Clip and the body shell 将车壳和车尾壳底部的R扣拆下并取出上下壳

Step 3. Connect the battery with the ESC. 连接电池与电子调速器的接线

Caution: When connect the battery with the ESC, please keep the ESC in off state.


注意：电池连接电调前，请保持电调处于关闭状态。

Step 4. Install anti-roll bars ,body shell and helmet. 安装摩托车的防倾杆、外壳和头盔。

1) Install the aniti-roll bar and put it set into the aniti-roll bar post then lock each of the grains.

将防倾杆安装到车架的插孔位置，并用机米将每个插孔锁紧。

2) Install the helment on the body shell, then install the boday shell on the main frame,fix the body shell post with the R-clip.先将头盔安装在车壳上，再将整个车壳安装在车架上，车壳柱穿过车壳并用R扣固定。

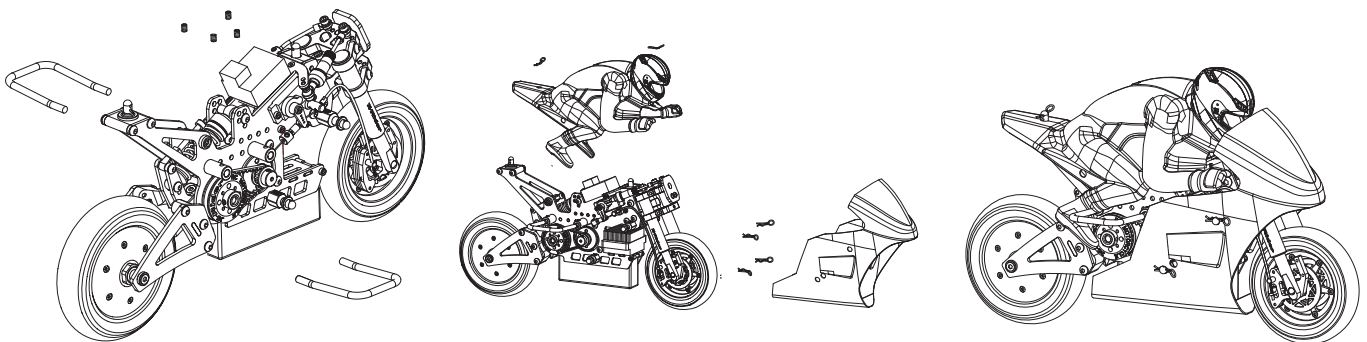

## 【Steering Setup / 正确行驶的技术要领】

Basic Controls: 基本操作


Caution : RC Motorcycle comes with a Counter-Steering System. It means the direction between the transmitter steering wheel and the motorcycle front wheel are opposite.

Please setting AUX of the remote control when power on.(Refer to the manual of the remote control .)

注意：遥控摩托车的操作系统是反向的，遥控器的操控轮与摩托车前轮的方向相反。


开机之后请对遥控器进行混控设置，三通或四通开关式混控无效（具体的设置请另行参考各品牌遥控器操作）。

如非标配的刹车舵机，操控摩托车之前请设置好刹车舵机的角度行程，以防舵机机构扫齿。

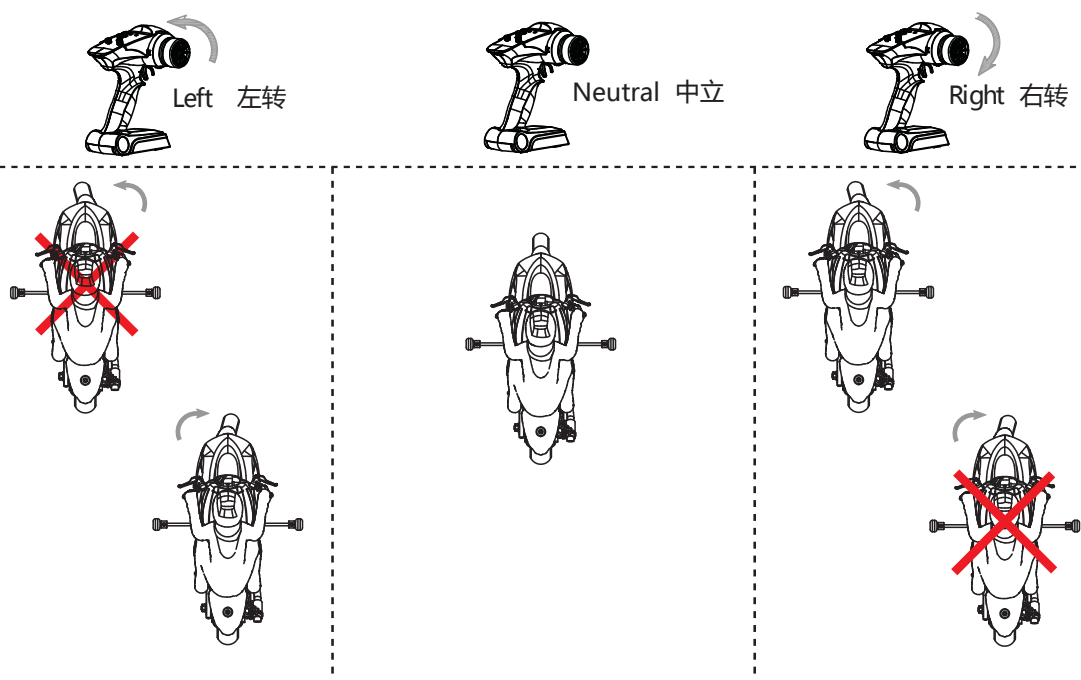

## 【Steering Setup / 正确行驶的技术要领】

To return the motorcycle from a leaning posture to an upright posture, turn the steering in the opposite direction to the lean. 使摩托车从倾斜位置到直立位置时，请反方面调节。

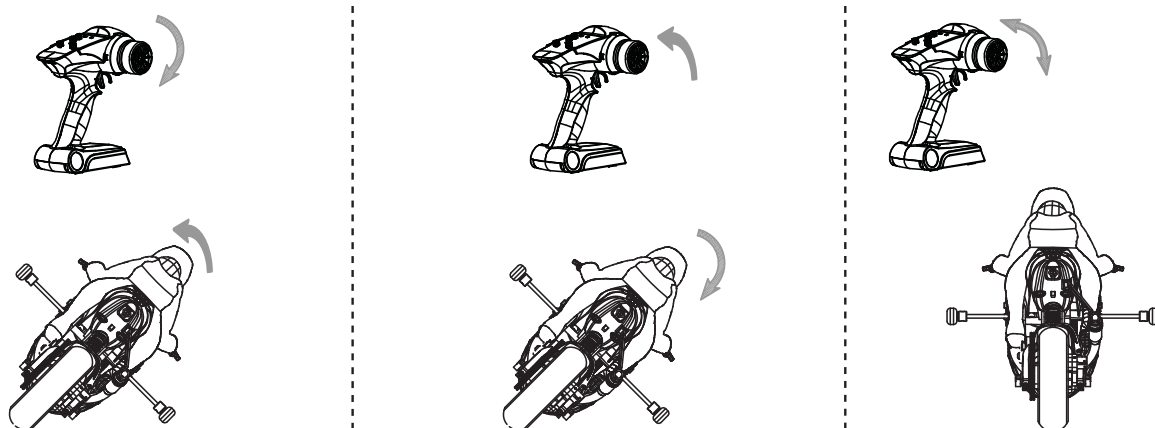

To make a right turn, turn the steering wheel to the right. The motorcycle should lean to the right.

向右倾斜时，摩托车右转。


If the balance bar touches the ground, the motorcycle will not turn well. Turn steering left to return to upright posture.

当防倾斜杆接触地面时，车子会走得不顺畅；请右调方向轮，摩托车回到直立位置。

When upright, straighten (neutral) steering.

当直立位置时，方向轮在中立位置。

## 【P1-1】

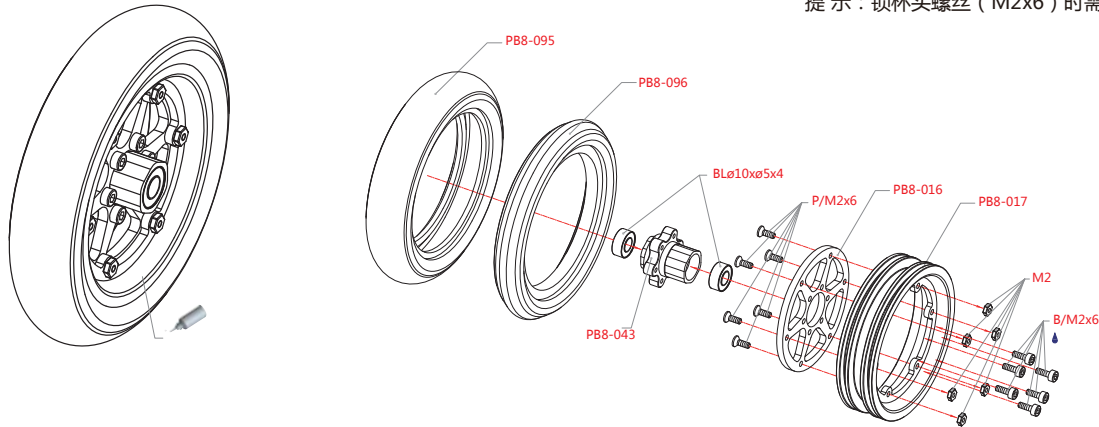


Note : Please coated the screw glue first when screwing down the socket head screw(M2x6) .  
提示 : 锁杯头螺丝 ( M2x6 ) 时需先涂上螺丝胶。

Note : Please apply the rim and the tire with CA glue after finishing assembly.  
When change the tire,please check the bearing have any injured and apply the gear silicone oil.

提示 : 完成前轮安装后请将轮辋与轮胎用快干胶固定 ; 如需更换轮胎请检查轴承是否损坏 , 同时再添加润滑油。

## 【P1-2】

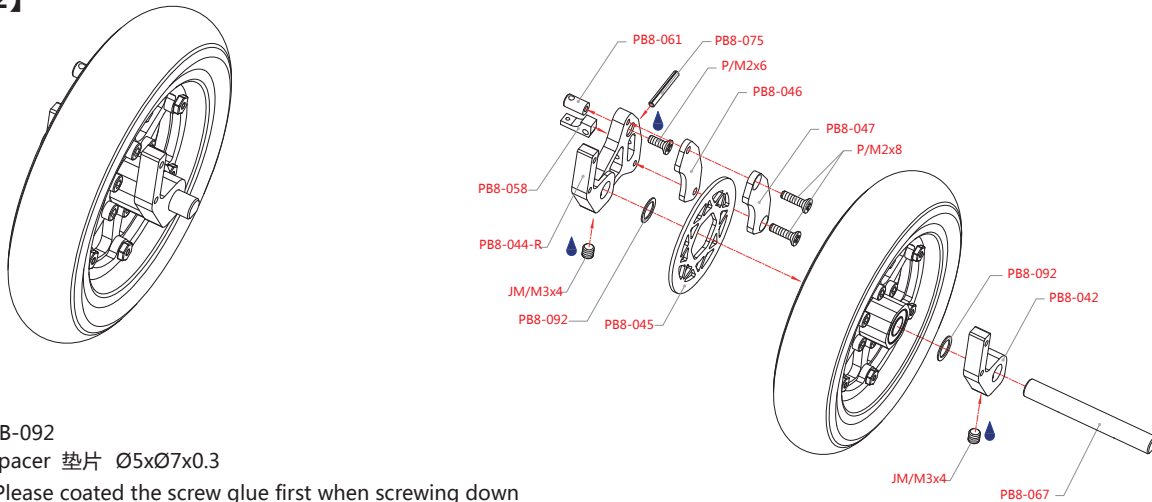


○ PB-092  
Spacer 垫片 Ø5xØ7x0.3

Note : Please coated the screw glue first when screwing down the flat head screw(M2x6) and the grains(M3x4).


提示 : 锁平头螺丝 ( M2x6 ) 和机米 ( M3x4)时需先涂上螺丝胶。

## 【P1-3】

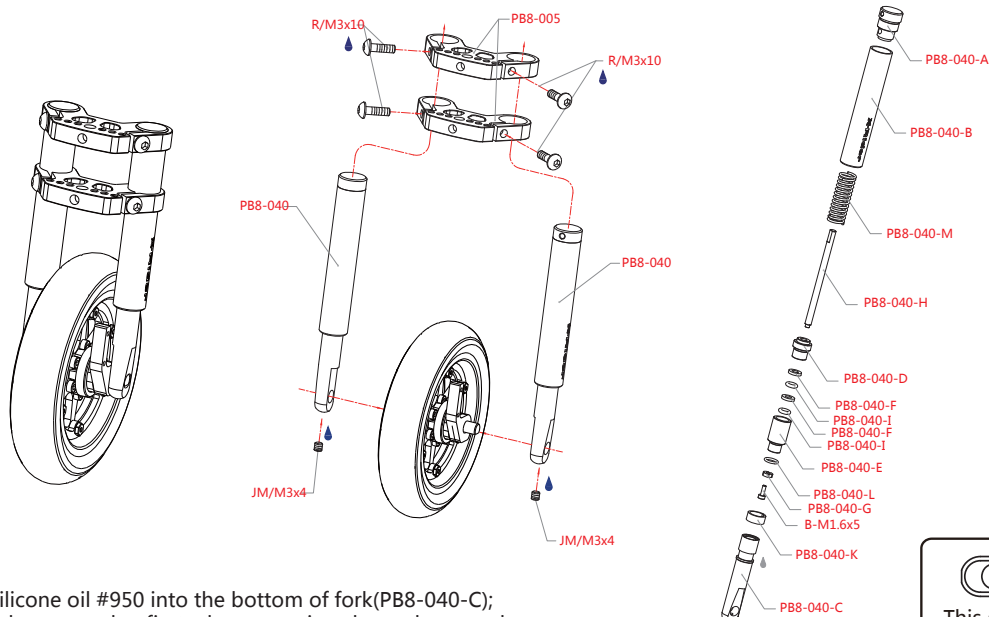

Note : Inject silicone oil #950 into the bottom of fork(PB8-040-C);  
Coated the screw glue first when screwing down the round head screw(M3x10) and the grains(M3x4).


提示 : 油压脚(PB8-040-C) 灌入#950号避震油 ;  
锁圆头螺丝 ( M3x10)和机米 ( M3x4)时需涂上螺丝胶。

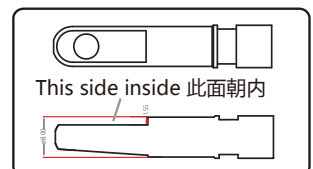


This side inside 此面朝内



## 【P2-1】

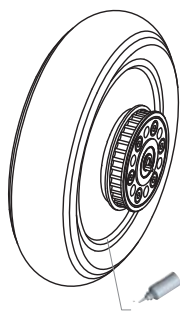



Note : Please grease the planet gear first when install the gyro pocket. Pls apply the rim and the tire with CA glue after finishing assembly. When change the tire , please check the bearing have any injured and apply the gear silicone oil.  
提示 : 安装陀螺仪时请在行星齿上添加润滑油; 完成陀螺仪安装后请将陀螺仪上下盖与轮胎用快干胶固定; 如需更换轮胎请检查轴承是否损坏, 同时再添加润滑油。

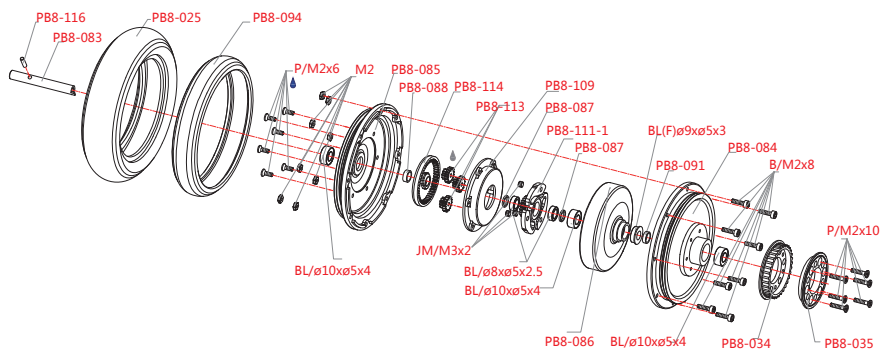

- PB-087 Spacer垫片 Ø5.1xØ6.5x0.8
- PB-088 Spacer垫片 Ø5.1xØ6.5x2.3
- PB-091 Spacer垫片 Ø5.1xØ6.5x1.8

Note : Please coated the screw glue first when screwing down the flat head screw(M2x6) .  
提示 : 锁平头螺丝 ( M2x6 ) 时需先涂上螺丝胶。



## 【P2-3】

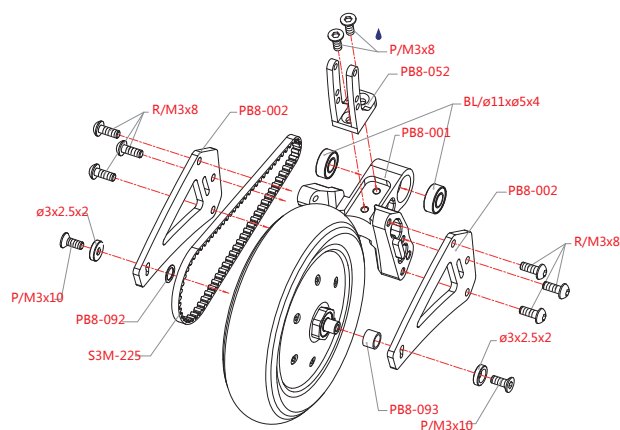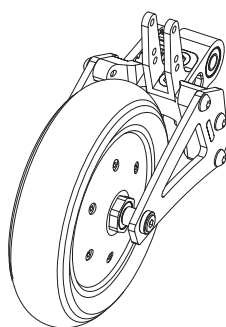

- PB-092 Spacer垫片 Ø5xØ7x0.3
- PB-093 Spacer垫片 Ø5.1xØ6.5x4.5



Note : Please coated the screw glue first when screwing down the flat head screw(M3x8) .  
提示 : 锁平头螺丝 ( M3x8 ) 时需先涂上螺丝胶。

## 【P3-1】

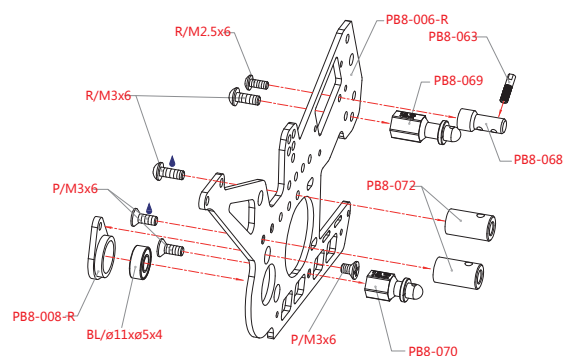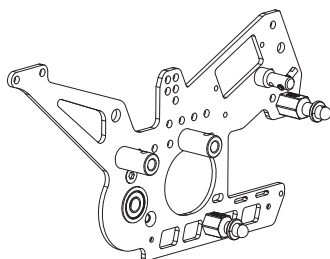


Note : Please coated the screw glue first when screwing down the flat head screw(M3x6) and the round head screw(M3x6).  
提示 : 锁平头螺丝 ( M3x6)和圆头螺丝(M3x6)时需先涂上螺丝胶。

## 【P3-2】

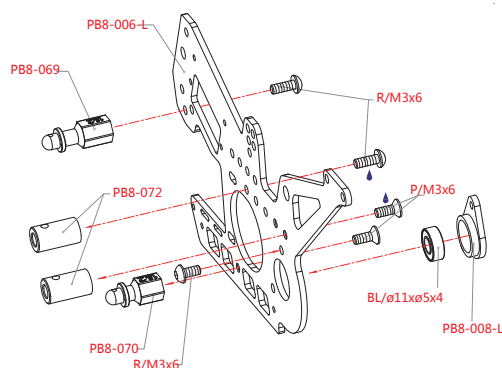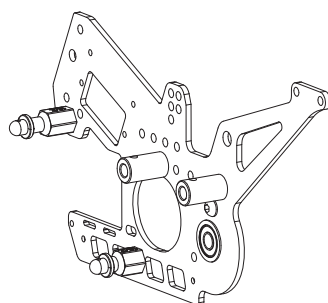

Note : Please coated the screw glue first when screwing down the flat head screw(M3x6) and the round head screw(M3x6).  
提示 : 锁平头螺丝 ( M3x6)和圆头螺丝(M3x6)时需先涂上螺丝胶。

## 【P3-3】

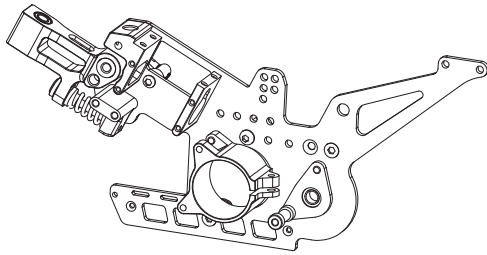

PB-014

Buffer Spring缓冲弹簧 Ø8xØ1.5x23




PB-073


Spacer垫片 Ø3xØ8x1.5

Note : Please coated the screw glue first when screwing down the flat head screw(M3x10), the round head screw (M3x8)&(M4x8) and the socket head screw(M2x6).

提示 : 锁平头螺丝 ( M3x10 ) ,圆头螺丝 ( M3x8)&(M4x8)和杯头螺丝 ( M2x6)时需先涂上螺丝胶。

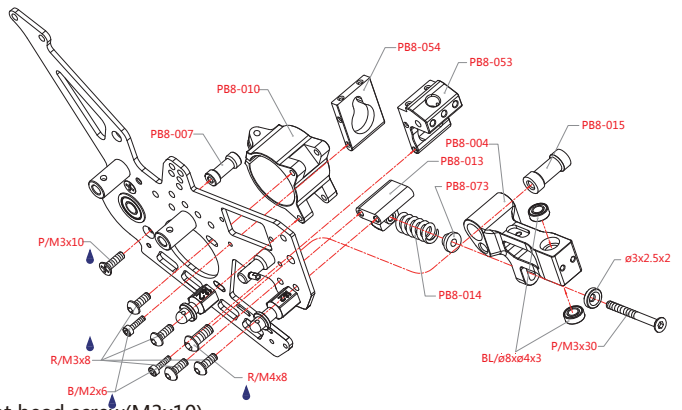

## 【P3-4】

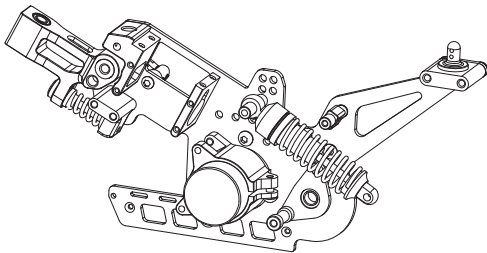


Note : Inject silicone oil #5000-10000 into the rear shock absorber according the different site.


Please coated the screw glue first when screwing down the socket head screw(M2x6)&(M2.5x8) and the grains(M3x4).

提示 : 根据不同场地灌入#5000-10000避震油 ;

锁杯头螺丝 ( M2x6 ) &(M2.5x8) 和机米 ( M3x4)时需先涂上螺丝胶。

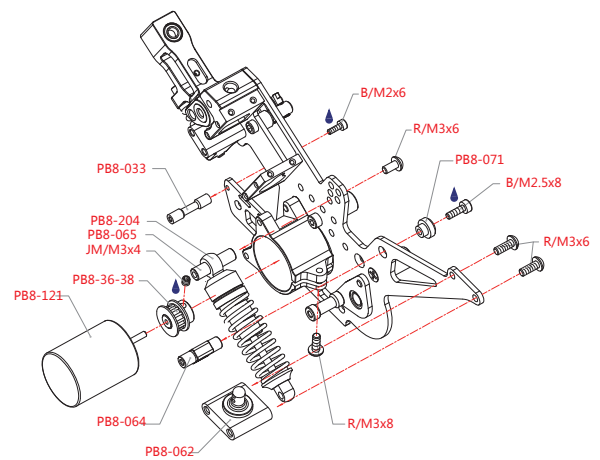


## 【P3-5】


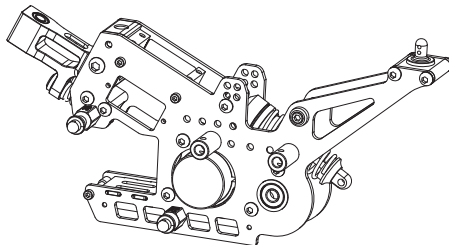


Note : Please coated the screw glue first when screwing down the socket head screw(M2.5x8) .


提示 : 锁杯头螺丝(M2.5x8) 时需先涂上螺丝胶。

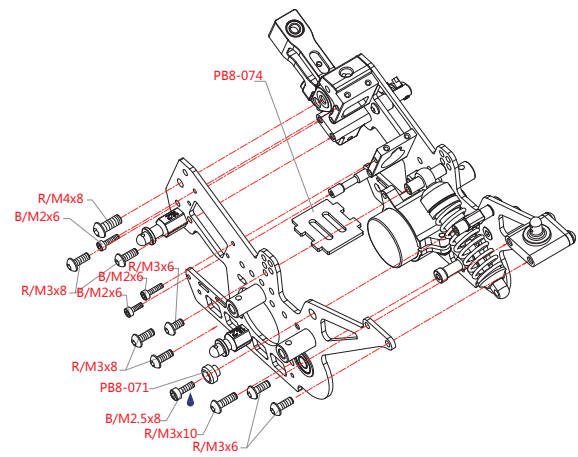

## 【P3-6】

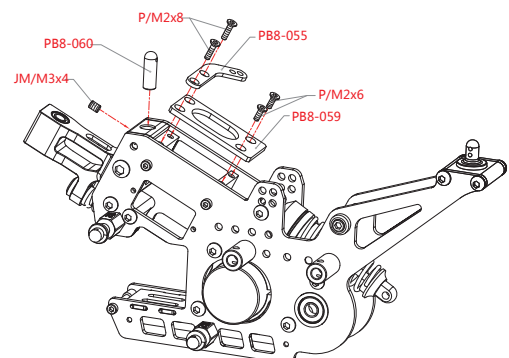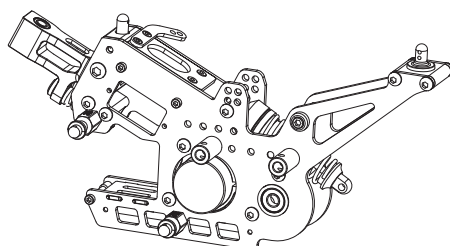


## [P4-1]

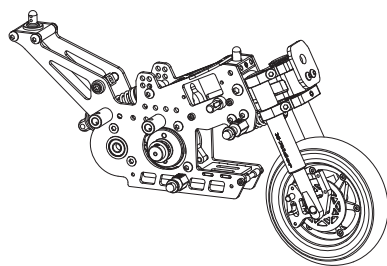


- PB-089  
Spacer垫片 Ø4xØ6x0.3

Note : Please coated the screw glue first when screwing down the socket head screw(M2.5x8) and the grains(M4x4).  
提示 : 锁杯头螺丝(M2.5x8) 和机米 ( M4x4)时需先涂上螺丝胶。

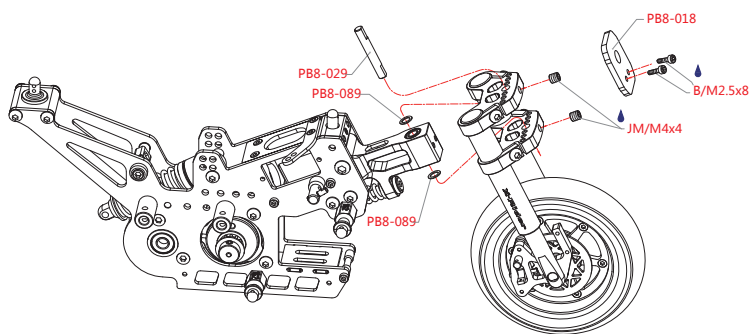


## [P4-2] Note : Inject Silicone oil #2000~#2800 into the shock Absorber. 提示 : 后避震器灌入#2000~#2800号的避震油。

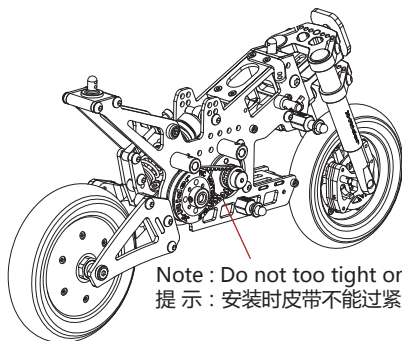


Note : Do not too tight or loose at the belt.  
提示 : 安装时皮带不能过紧或过松。

- PB-087  
Spacer垫片 Ø5.1xØ6.5x0.8

Note : Please coated the screw glue first when screwing down the socket head screw(M3x25) , the flat head screw (M2.5x6)and the grains(M3x4).  
提示 : 锁圆头螺丝 ( M3x25 ) ,平头螺丝 ( M2.5x6)和机米 ( M3x4)时需先涂上螺丝胶。

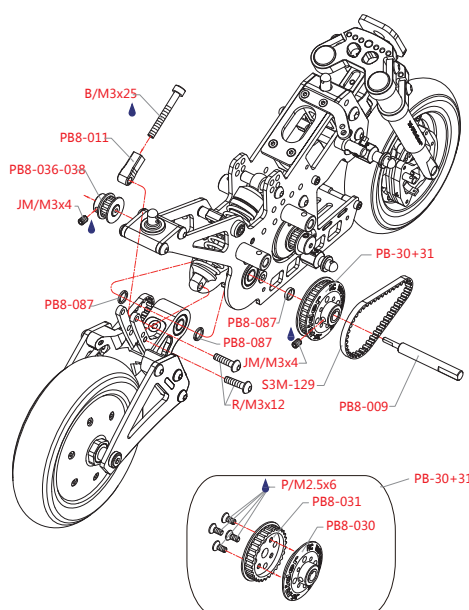

## [P4-3]

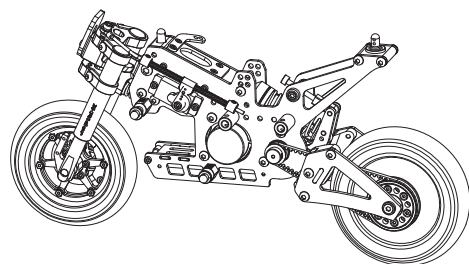


- PB8-082  
Steering arm wire单头螺纹杆 M2x100mm

Note : If the motorcycle does not run straight even after adjusting the steering trim or steering movement is not responding properly.It is possible the steering arm is bent. In this case, please use the include tweezers to gradually, while not operating the steering.  
提示 : 如果在调整转向微调后摩托车仍然不能直线行驶或者转向正确的方面,很有可能是因为转向螺纹杆弯曲了,这种情况,请在不操作转向的状态下,通过工具,将转向螺纹杆向中心位置调整。



Note : There are 3 holes to adjust turn in the shock absorbed.the left side is fast turns,the right side is for beginner and the middle is default setup.  
提示 : 减震器固定板有3个孔可调,左边为快速转弯;右边为初学者;中间为出厂默认设置。

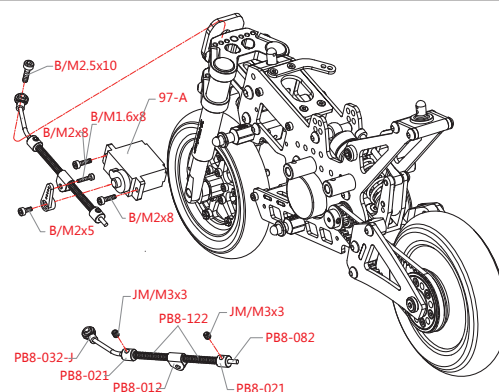

- PB8-122  
Spring弹簧Ø3x0.4x22

Note : The Spring should free move;do not too tight or loose.

提示 : 安装弹簧是不能太松或太紧。





- PB8-012  
Steering slide转向推杆配件


Note : Do not over tighten to ensure free  
提示 : 安装转向推杆配件不能太紧,需自由活动。



## 【P4-4】

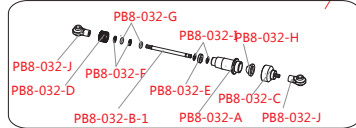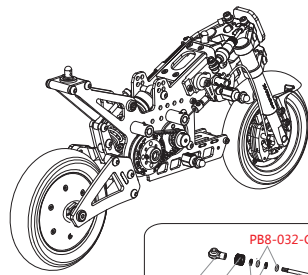



PB8-032

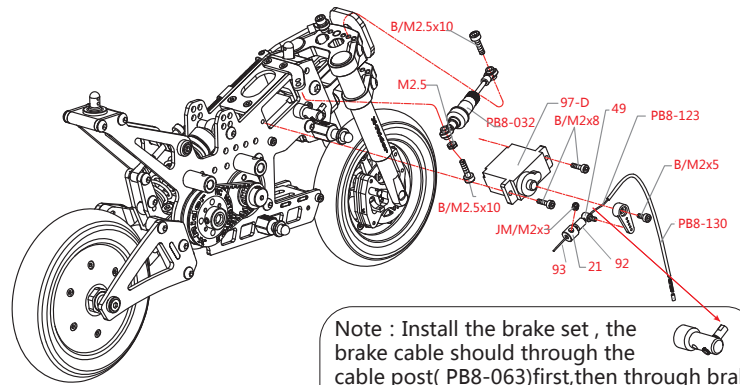

Note : Install the brake set , the brake cable should through the cable post( PB8-063)first,then through brake cable arm(49).提示：安装时需先把刹车线穿过过刹车定位 ( PB8-063 ) 再装刹车拉杆 ( 49 ) 。

Note : Apply silicone oil #500~#1000 on the shaft.  
提示：管身灌入#500~#1000号的避震油。

## 【P4-5】


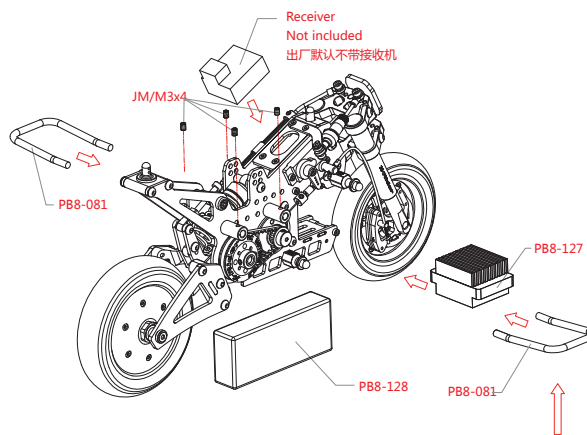
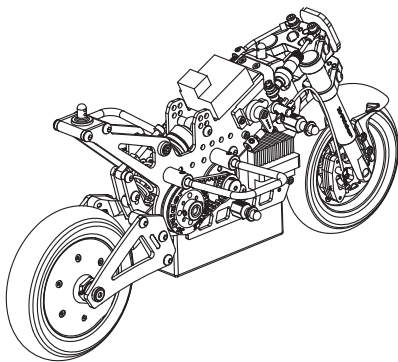


Note : The anti-roll bars can use different shapes in different site.  
提示：根据不同的场地可选择不同形状的防倾杆。

U Suitable for smoothness road and high wear resistance.  
适合在较为平整的路面使用，优点是耐磨度高。

U Suitable for bumpy and rough road, slide like a wheel, reduce the bump.  
适合在较为凹凸不平的路面使用，优点像大轮子在地面滑行，减少边角与路面的碰撞，但耐磨度减低。

## 【P4-6】

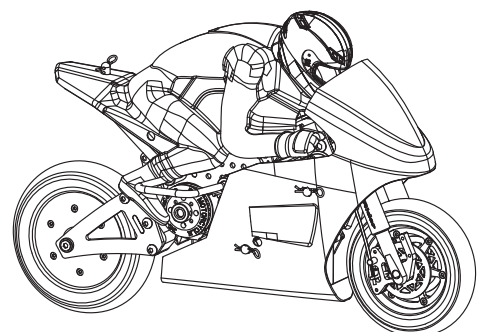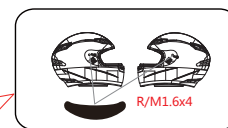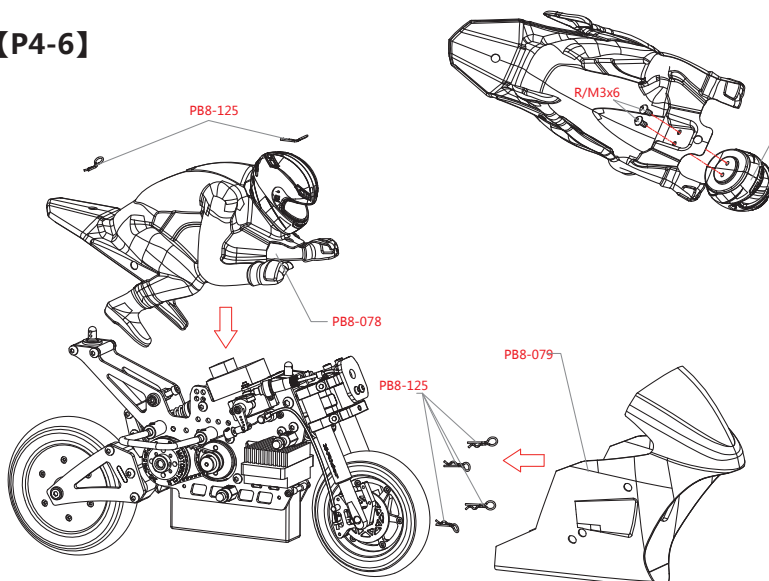

## Saturn Past List 零配件

| Ref.No./图号 | Part Name                  | 零件名称    | Qty/数量 |
|------------|----------------------------|---------|--------|
| PB8-001    | Rear Swing Arm Post        | 后摇臂座    | 1      |
| PB8-002    | Rear Swing Arm Plate       | 后摇臂碳板   | 2      |
| PB8-003    | Rear Wheel Shaft           | 后轮轴     | 1      |
| PB8-004    | Steering Pivot             | 转向臂     | 1      |
| PB8-005    | Steering Triple            | 减震器固定板  | 2      |
| PB8-006-L  | Main Frame L               | 车架左侧板   | 1      |
| PB8-006-R  | Main Frame R               | 车架右侧板   | 1      |
| PB8-007    | Shaft Post                 | 轴套固定柱   | 1      |
| PB8-008-L  | Bearing Cover R            | 轴套 (左)  | 1      |
| PB8-008-R  | Bearing Cover L            | 轴套 (右)  | 1      |
| PB8-009    | Rear Swing Shaft           | 后摇臂轴    | 1      |
| PB8-010    | Motor Post                 | 电机座     | 1      |
| PB8-011    | Shock Block                | 后减震器高低块 | 1      |
| PB8-012    | Steering Slide             | 转向推杆配件  | 1      |
| PB8-013    | Steering Spring Post       | 转向臂弹簧座  | 1      |
| PB8-014    | Buffer Spring              | 缓冲弹簧    | 1      |
| PB8-015    | Steering Post              | 转向臂固定柱  | 1      |
| PB8-016    | Front Wheel Rim Plate      | 前轮辋碳板   | 1      |
| PB8-017    | Front Wheel Rim            | 前轮辋     | 1      |
| PB8-018    | Bumper                     | 防撞板     | 1      |
| PB8-021    | Cable Post                 | 钢丝定位    | 2      |
| PB8-025    | Rear Tire                  | 后轮胎     | 1      |
| PB8-029    | Steering Shaft             | 转向轴     | 1      |
| PB8-030    | 30T Gear Belt Pulley       | 30齿皮带轮  | 1      |
| PB8-031    | 30T Gear Belt Pulley Cover | 30齿皮带轮盖 | 1      |
| PB8-032    | Steering Shock Absorber    | 推杆油压    | 1      |
| PB8-032-J  | Ball Stud                  | 球头      | 1      |
| PB8-033    | Frame Post                 | 车架固定柱   | 1      |
| PB8-034    | 33T Gear Belt Pulley       | 33齿皮带轮  | 1      |
| PB8-035    | 33T Gear Belt Pulley       | 33齿皮带轮  | 1      |
| PB8-36-38  | 12T Gear Belt Pulley       | 12齿皮带轮  | 2      |
| 92         | Flexible Pipe              | 矽质软管    | 1      |
| 93         | Heat Tube                  | 热缩管     | 1      |
| PB8-040    | Fr. Shock Absorber         | 前避震器    | 2      |
| PB8-042    | Front Left Brake Caliper   | 前左刹车卡钳座 | 1      |
| PB8-043    | Front Hub                  | 前轮毂     | 1      |
| PB8-044-R  | Front Right Brake Caliper  | 前右刹车卡钳座 | 1      |

| Ref.No./图号 | Part Name                  | 零件名称            | Qty/数量 |
|------------|----------------------------|-----------------|--------|
| PB8-045    | Front Brake Disc           | 前刹车碟            | 1      |
| PB8-046    | Front Brake Pad            | 前刹车片 (薄)        | 1      |
| PB8-047    | Front Brake Pad            | 前刹车片 (厚)        | 1      |
| PB8-052    | Shock Absorber Post        | 后减震器固定座         | 1      |
| PB8-053    | Servo Fixed Block ( Front) | 舵机固定块 (前)       | 1      |
| PB8-054    | Servo Fixed Block ( Rear ) | 舵机固定块 (后)       | 1      |
| PB8-055    | Steering Shock Plate       | 转向油压固定板         | 1      |
| PB8-056    | Helmet                     | 头盔              | 1      |
| PB8-058    | Brake Cable Post           | 刹车脚             | 1      |
| PB8-059    | Receiver Plate             | 接收机固定板          | 1      |
| PB8-060    | Body Shell Post            | 车壳固定柱           | 1      |
| PB8-061    | Brake Cable Post           | 刹车线定位           | 1      |
| PB8-062    | Body Shell Post            | 尾壳固定座           | 1      |
| PB8-063    | Cable Post                 | 刹车线定位           | 1      |
| PB8-064    | Shock Block                | 后减震器高低块         | 1      |
| PB8-065    | Rear Wheel Shaft           | 后轮轴             | 1      |
| PB8-067    | Front Wheel Shaft          | 前轮轴             | 1      |
| PB8-068    | Cable Post                 | 刹车线固定座          | 1      |
| PB8-069    | Body Shell Post            | 车壳固定柱           | 2      |
| PB8-070    | Body Shell Post            | 车壳固定柱           | 2      |
| PB8-071    | SpacerØ2.5xØ8x3            | 垫片Ø2.5xØ8x3     | 2      |
| PB8-072    | Aniti-roll Bar Post        | 防倾杆固定座          | 4      |
| PB8-073    | SpacerØ3xØ8x1.5            | 垫片Ø3xØ8x1.5     | 1      |
| PB8-074    | ESC Frame                  | 电调固定板           | 1      |
| PB8-075    | Pin                        | 开口销             | 1      |
| PB8-078    | Body Upper Shell           | 上壳              | 1      |
| PB8-079    | Body lower Shell           | 下壳              | 1      |
| PB8-081    | Aniti-roll Bar             | 防倾杆             | 2      |
| PB8-082    | Steering Arm               | 转向推杆            | 1      |
| PB8-083    | Gyro Shaft                 | 陀螺仪轴            | 1      |
| PB8-084    | Gyro Upper Cover           | 陀螺仪上盖           | 1      |
| PB8-085    | Gyro Lower Cover           | 陀螺仪下盖           | 1      |
| PB8-086    | Gyro Flywheel              | 陀螺钢锤            | 1      |
| PB8-087    | SpacerØ5.1xØ6.5x0.8        | 垫片Ø5.1xØ6.5x0.8 | 5      |
| PB8-088    | SpacerØ5.1xØ6.5x2.3        | 垫片Ø5.1xØ6.5x2.3 | 1      |
| PB8-089    | SpacerØ4xØ6x1.4            | 垫片Ø4xØ6x1.4     | 2      |
| PB8-091    | SpacerØ5.1xØ6.5x1.8        | 垫片Ø5.1xØ6.5x1.8 | 1      |



| Ref.No./图号 | PartName                 | 零件名称            | Qty/数量 |
|------------|--------------------------|-----------------|--------|
| PB8-092    | SpacerØ5xØ7x0.3          | 垫片Ø5xØ7x0.3     | 3      |
| PB8-093    | SpacerØ5.1xØ6.5x4.5      | 垫片Ø5.1xØ6.5x4.5 | 1      |
| PB8-094    | Rear Inner Tube ( Gyro)  | 陀螺仪后轮内胎         | 1      |
| PB8-095    | Front Tire               | 前轮胎             | 1      |
| PB8-096    | Front Inner Hube         | 前轮内胎            | 1      |
| PB8-109    | Gyro Gear Cover          | 陀螺齿轮盖           | 1      |
| PB8-111-1  | Gyro Clutch              | 陀螺离合器           | 1      |
| PB8-113    | Gyro Planet Gear         | 陀螺行星齿           | 3      |
| PB8-114    | Gyro Inner Gear          | 陀螺内齿            | 1      |
| PB8-116    | Gyro Pin                 | 陀螺内齿管销          | 1      |
| PB8-121    | Motor                    | 电机              | 1      |
| PB8-122    | SpringØ3X0.4X22          | 弹簧Ø3X0.4X22     | 2      |
| PB8-123    | Brake Cable              | 刹车线             | 1      |
| PB8-125    | R Clip                   | R扣              | 10     |
| PB8-127    | ESC                      | 电调              | 1      |
| PB8-128    | Battery                  | 电池              | 1      |
| PB8-130    | Brake Spring Tube        | 刹车线管            | 1      |
| PB8-204    | Shock Absorber           | 后减震器            | 1      |
| S3M-129    | Motor Belt               | 电机皮带            | 1      |
| S3M-225    | Drive Belt               | 传动皮带            | 1      |
| 21         | Brake Cable Post         | 刹车线定位           | 1      |
| 49         | Brake Cable Arm          | 刹车拉杆            | 1      |
| 97-A       | Steering Servo           | 方向舵机            | 1      |
| 97-D       | Braking Servo            | 刹车舵机            | 1      |
| R/M1.6x4   | Round Head ScrewM1.6x4   | 圆头螺丝M1.6x4      | 2      |
| R/M2.5x6   | Round Head ScrewM2.5x6   | 圆头螺丝M2.5x6      | 1      |
| R/M3x6     | Round Head ScrewM3x6     | 圆头螺丝M3x6        | 11     |
| R/M3x8     | Round Head ScrewM3x8     | 圆头螺丝M3x8        | 17     |
| R/M3x10    | Round Head ScrewM3x10    | 圆头螺丝M3x10       | 5      |
| R/M3x12    | Round Head ScrewM3x12    | 圆头螺丝M3x12       | 2      |
| R/M4x8     | Round Head ScrewM4x8     | 圆头螺丝M4x8        | 1      |
| B/M1.6x8   | Socket Head ScrewM1.6x8  | 杯头螺丝M1.6x8      | 1      |
| B/M2x5     | Socket Head ScrewM2x5    | 杯头螺丝M2x5        | 2      |
| B/M2x6     | Socket Head ScrewM2x6    | 杯头螺丝M2x6        | 12     |
| B/M2x8     | Socket Head ScrewM2x8    | 杯头螺丝M2x8        | 12     |
| B/M2.5x8   | Socket Head ScrewM2.5x8  | 杯头螺丝M2.5x8      | 4      |
| B/M2.5x10  | Socket Head ScrewM2.5x10 | 杯头螺丝M2.5x10     | 3      |

| Ref.No./图号   | PartName               | 零件名称        | Qty/数量 |
|--------------|------------------------|-------------|--------|
| B/M3x25      | Socket Head ScrewM3x25 | 杯头螺丝M3x2.5  | 1      |
| B/M4x8       | Socket Head ScrewM4x8  | 杯头螺丝M4x8    | 1      |
| P/M2x6       | Flat Head ScrewM2x6    | 平头螺丝M2x6    | 15     |
| P/M2x8       | Flat HeadScrewM2x8     | 平头螺丝M2x8    | 4      |
| P/M2x10      | Flat headscrewM2x10    | 平头螺丝M2x10   | 6      |
| P/M2.5x6     | Flat Head ScrewM2.5x6  | 平头螺丝M2.5x6  | 4      |
| P/M3x6       | Flat Head ScrewM3x6    | 平头螺丝M3x6    | 5      |
| P/M3x8       | Flat Head ScrewM3x8    | 平头螺丝M3x8    | 2      |
| P/M3x10      | Flat Head ScrewM3x10   | 平头螺丝M3x10   | 3      |
| P/M3x30      | Flat Head ScrewM3x30   | 平头螺丝M3x30   | 1      |
| BLØ8xØ4x3    | BearingØ8xØ4x3         | 轴承Ø8xØ4x3   | 2      |
| BLØ8xØ5x2.5  | BearingØ8xØ5x2.5       | 轴承Ø8xØ5x2.5 | 2      |
| BL(F)Ø9xØ5x3 | Flange Bearing Ø9xØ5x3 | 法兰轴承Ø9xØ5x3 | 1      |
| BLØ10xØ5x4   | BearingØ10xØ5x4        | 轴承Ø10xØ5x4  | 5      |
| BLØ11xØ5x4   | BearingØ11xØ5x4        | 轴承Ø11xØ5x4  | 4      |
| Ø3x2.5x2     | SpacerØ3xØ2.5x2        | 垫片Ø3xØ2.5x2 | 3      |
| JM/M2x3      | GrainsM2x3             | 机米M2x3      | 1      |
| JM/M3x2      | GrainsM3x2             | 机米M3x2      | 3      |
| JM/M3x3      | GrainsM3x3             | 机米M3x3      | 2      |
| JM/M3x4      | GrainsM3x4             | 机米M3x4      | 12     |
| JM/M4x4      | GrainsM4x4             | 机米M4x4      | 2      |
| M2           | Nut M2                 | 螺母M2        | 14     |
| M2.5         | Nut M2.5               | 螺母M2.5      | 2      |



X-RIDER MODEL COMPANY LIMITED

騎士模型有限公司

[www.cx3rider.com](http://www.cx3rider.com)

Unit 705, Sea View Plaza, 283 Shauiwan Road, Hong Kong

香港筲箕灣道283号海景广场7字楼705室

Tel / 电话 : +852-5261 8511

Email / 邮箱 : [Info@cx3rider.com](mailto:Info@cx3rider.com)

@Copyright 2016 X-RIDER

06012016-01Version